



DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
Fax..... + 47 35 98 56 10
E-mail..... dnh@dnh.no
Web-Site..... www.dnh.no

ENGLAND
DNH WW Ltd

Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY
DNH GmbH





Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de

SAFE-m6(T)


USA
DNH Speakers Inc

Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..... dnh@dnhspeakers.com

ISO 9001 CERTIFIED

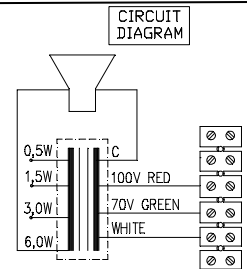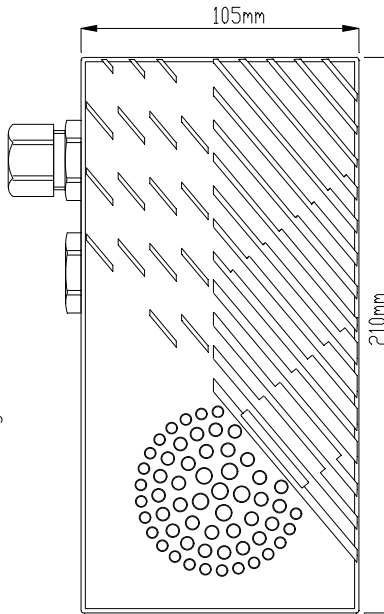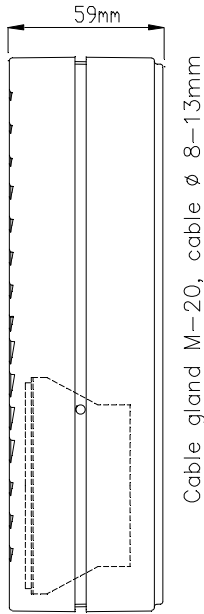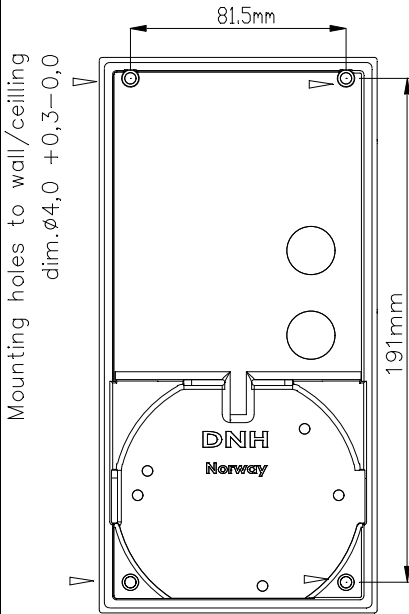

Primary connection	
White:Green	70V
White:Red	100V
Secondary nominal tapings	
C : 6W	6,0 W
C : 3W	3,0 W
C : 1,5W	1,5 W
C : 0,5W	0,5 W

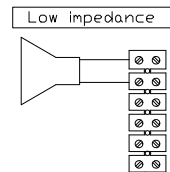

Sound pressure levels at 1W/1m
SPL vs Freq



Specifications

Material / Color	Aluminum / RAL9010 or RAL3000
Mounting	4 screws
Termination	Screw terminal
Weight w/transformer	1,35 kg
IP-rating	56(Terminal chamber)
Max. / min. amb. temp	100°C / -40°C
Rated / max. power	6 W / 10 W
SPL 1W/1m	89 dB
SPL rated power	97 dB
Effective freq. range	160 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	165° / 110°
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Open the cabinet using the enclosed Allen key to loosen the screws on three sides of the cabinet.
- Lead cable through the cable gland and connect to terminal 70V (white – green) or 100V (white – red).
- Choose required power on the transformer.
- Fasten the mounting plate to wall or ceiling by four screws.
- Close the cabinet by fasten three screws on three sides of the cabinet.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a two years warranty against defective workmanship.